


User Manual

# Remote Control

## R06 Receiver

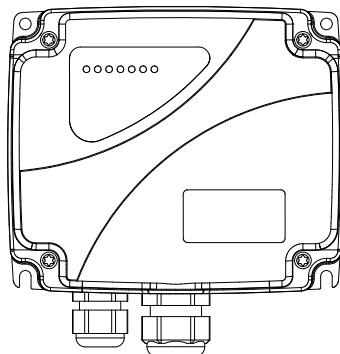

## Revision history

*Table of revisions*

Date	Changed	Rev
March 2019	Updated safety information and technical description	0201
January 2019	Rebranded to Danfoss Power Solutions	0101

**Contents**

**Safety instructions**

FCC rules.....	4
General safety.....	4
Safety warnings.....	5

**Technical description**

Dimensions.....	6
Hardware description.....	7
R06 Detailed description.....	7

**Installation**

Receiver installation.....	9
----------------------------	---

**Troubleshooting**

R06 troubleshooting.....	10
--------------------------	----

## Safety instructions

### FCC rules

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

Changes or modifications not expressly approved by the manufacturer can void the user's authority to operate the equipment.

To comply with FCC RF exposure compliance requirements, this device and its antenna must not be collocated with, or operating in conjunction with, any other antenna or transmitter, may not cause harmful interference, and must accept any interference received, including interference that may cause undesired operation.

The limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### **Warning**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### R06 General Safety

The following safety instructions must be read carefully to install and use the product properly, and to keep it in perfect working condition, and to reduce the risk of misuse.

- Strictly adhere to the installation instructions contained in this document.
- Make sure that professional and competent personnel carry out the installation.
- Ensure that all site and prevailing safety regulations are fully respected.
- Make sure that this document is permanently available to the operator and maintenance personnel.
- Keep the transmitter out of reach of non-authorized personnel.
- Remove the transmission key when the set is not in use.
- Check each working day the STOP button and other safety measures. When in doubt, press the STOP button.
- Whenever several sets have been installed, make sure the transmitter is the right one. Identify the machine controlled on the label for this purpose on the transmitter or by using the display (in case it has one).
- Service the equipment periodically.
- When carrying out repairs, use spare parts supplied by Danfoss only.

#### **Warning**

**Potential damage to the operator or the product.** Do not use this product on machines in potentially explosive atmospheres unless the model is ATEX/RATEX certified to work in such conditions.

## Safety instructions

### R06 Safety Warnings


**Potential damage to operator and product.**

**Follow the guidelines below to reduce risk of injury to the operator and the product.**


- Use the device with the manufacturer's battery and battery charger (if applicable).
- Only allow qualified personnel to operate the equipment.
- Always set the STOP button in the off position when not in use.
- Always press STOP before plugging in tether cable (if applicable).
- Remove the Tether connection on the transmitter First (if applicable).
- Do not operate product when visibility is limited.
- Make sure product is compatible with the machine.
- Avoid knocking or dropping the product.
- Do not use the product if a failure is detected.

**Changes or modifications not approved by Danfoss can void the user's authority to operate this product.**


#### Quick reference precautions

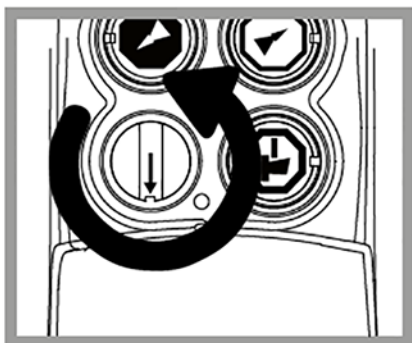


Remove the transmission key only when the set is not in use or to deny the access

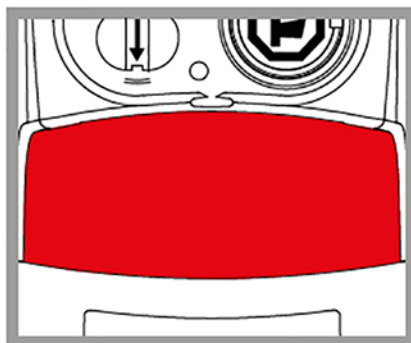


When in doubt, press the STOP button

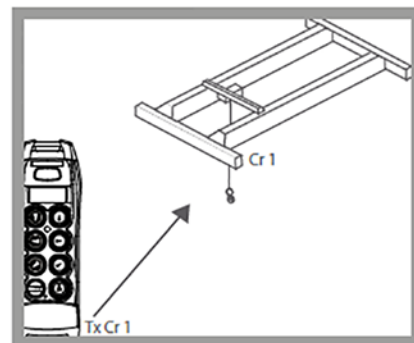

Make sure the transmitter works with the machine to be handled

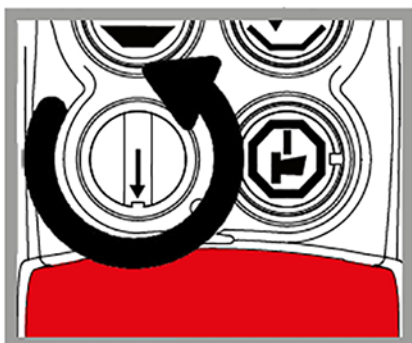

After use set the contact key and the STOP button

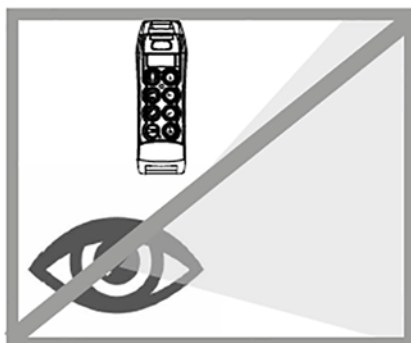

Do not use the set when visibility is limited




Avoid knocking or dropping the set

## Technical description

### R06 dimensions


*Dimensions in mm*

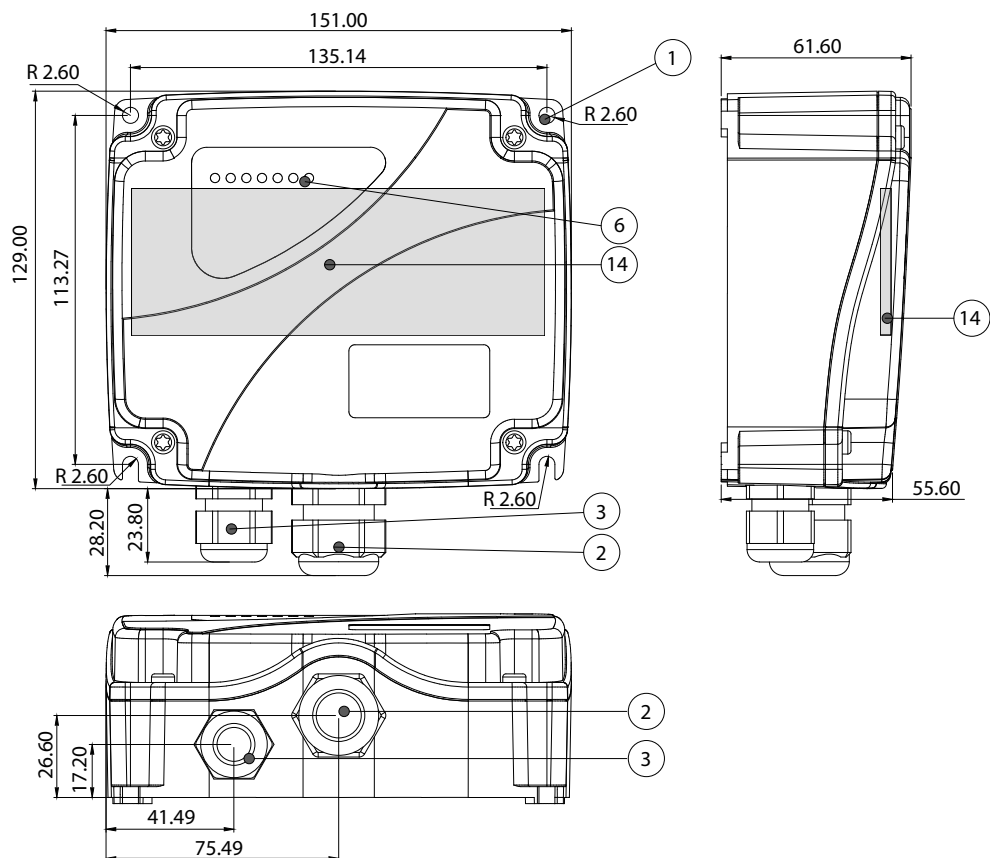

[See next page for callout details.](#)

## Technical description

### R06 hardware description

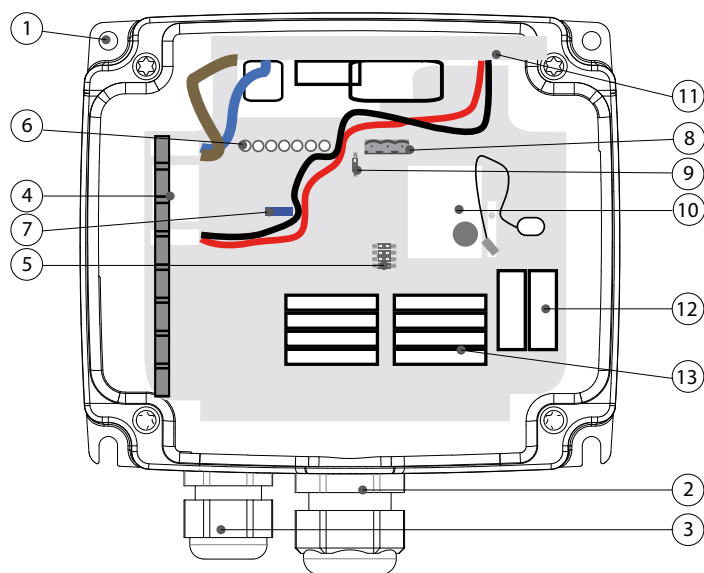

1. Fixing slots
2. Wiring CG
3. Wiring CG
4. AC input
5. IN4D/IN0-10; IN0-4/20mA
6. Signaling LEDs
7. EP70
8. CAN connection
9. BUS termination CAN
10. TR800CE MCX
11. Power supply 48-230 V
12. STOP relays
13. Maneuver relays
14. Internal multi-band antenna

### R06 Detailed description

#### Technical data

Description	Value
Stop function (400-900MHz)	Cat. 3-PLd
Ingress Protection rating	IP65/NEMA4

## Technical description

### Technical data (continued)

Description	Value
Frequency band - ERP	433.050 to 434.040 MHz; ERP<1mW
	434.040 to 434.790 MHz; ERP<10mW
	869.700 to 870.000 MHz; ERP<5mW
	902.000 to 928.000 MHz; ERP<1mW
Range Line of sight (guaranteed)	100m
AC power supply	48 - 230 Vac $\pm$ 25% (Multivoltage) / 18-30 Vac (700mA)
DC power supply	8 - 36 Vdc (2A)
Antenna	Internal
Removable EEPROM	Internal
Signaling	External
STOP Outputs (400-900MHz)	1 (6A)
Start Relay	1 (6A)
Safety Relay	1 (6A)
ON/OFF outputs	6 (6A)
Proportional Outputs	N/A
CAN Bus Protocols	CANopen
ON/OFF inputs	Option
Analog inputs	Option
Response Time	100ms
Maximum Total output current	8A
Operating Temperature Range	-20 °C to 70 °C (-4 °F to 158 °F)
Storage Temperature Range (24h)	-25°C to 75°C (-13°F to 167°F)
Storage Temperature Range (long periods)	-25°C to 55°C (-13°F to 131°F)
Relative Humidity	max. 95% without condensation
Weight	640 grams
Dimensions (LxWxH mm)	151x129x61
Tether connection	N/A
Associated transmitters (400-900MHz)	Ikargo1, T70/1, T70/2, IK2
<b>Options</b>	
Inputs	4 Digital or 1 Proportional input board



## Installation

### R06 receiver installation


The below information describes hazards to be aware of during installation and steps to locate the receiver.

#### Risk of shock

Completely shut down the machine when installing the receiver.


Check the power supply and shut off the main switch to disconnect the interface cable between the receiver and the machine's electrical box.

1. Find an easily accessible and clear location with a direct vision between the receiver's antenna and the transmitter's working area.

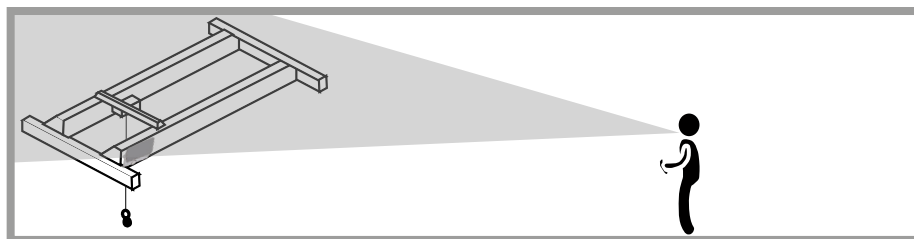


2. Optional: If it is difficult to achieve direct vision between the receiver's antenna and the transmitter's working area, it is recommended to use an extended antenna in a clear location (only for models that allow an antenna).

In areas of high vibration, the use of dampers is advised.

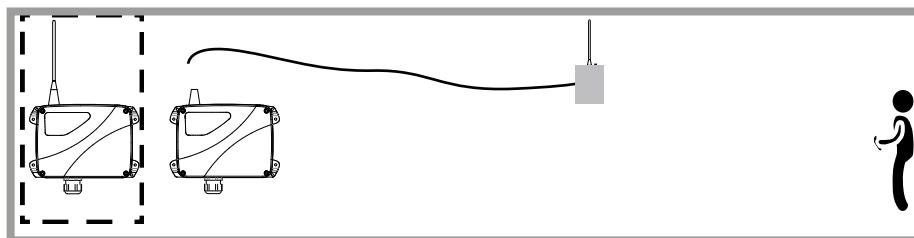

3. Proceed to connect the power supply. Use the connection block diagram provided with the system, where the correspondence between the transmitter maneuvers and the receiver's outputs are detailed.

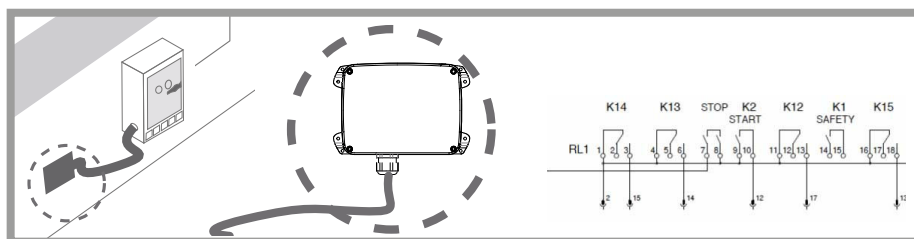

4. Check if the electrical installation and verify if there's an option to connect the neutral or the ground cable. In that case, don't forget to connect the ground cable.

The use of fireproof or flame retardant cables are recommended for the connection.

## Troubleshooting

### 400-900MHz Receiver LED troubleshooting

The troubleshooting LEDs are located on the receiver board. Use the following table to identify faults and corrective action.

In order to reach the signaling, the receiver must be accessible, connected, and the screws located on the receiver lid must be unscrewed using the proper screw driver whenever the LEDs are not externally visible.

The LEDs on the receiver board are POWER, HARDOK, SIGNAL, DATA, ID, ORDER and RELAY.

Please do check the following website for further information:

<https://troubleshooting.dps-rct.com/en/customer-service-center>

LED	Characteristic	Description	Action
POWER	Green; pulsing	Receiver is starting up	Wait until start-up process is finished
HARDOK	Green; continuous	Receiver hardware OK	Operate
	Red; pulsing	EEPROM error; data corruption; CAN bus error (if CANERR activates)	Reprogram EEPROM
	Red; other	Electronic board hardware breakdown	Replace device
SIGNAL	LED off	No radio signal detected	-
	LED on + transmitter switched off	Radio channel occupied	Change transmitter's frequency channel
	LED on + DATA switched off	Radio channel occupied by non Danfoss system	Change transmitter's frequency channel
DATA	LED off + SIGNAL LED on	Radio error	Replace radio
	Green; pulse	Receiving good frames	OK
ID	LED off + DATA LED on	No valid ID; Danfoss system nearby	If channel not occupied, check chosen ID in the transmitter or reset the receiver
	LED on + SIGNAL LED on + DATA LED on	Valid frames received from the transmitter; correct link	OK
RELAY	Green	STOP relay activated	-
ORDER	Green	LED ON Whenever any output is ON	-
CANERR	Red   slow pulses	CAN Error, physical Layer	Verify Connections
	Red   double pulses	One expansion has Stopped working	Verify Expansion boards
	Red   4 pulses	A Transmitted CAN frame has been lost	N/A
	Red   5 pulses	A Received CAN Frame has been lost	N/A
	Red   continuous	CAN Bus OFF	Verify CAN connections and Status.
CANRUN	Blinking Green	Pre operational Status	The Controller must set the CAN Receiver to operational Status
	Solid Green	Operational Status	OK

**Products we offer:**

- Cartridge valves
- DCV directional control valves
- Electric converters
- Electric machines
- Electric motors
- Gear motors
- Gear pumps
- Hydraulic integrated circuits (HICs)
- Hydrostatic motors
- Hydrostatic pumps
- Orbital motors
- PLUS+1® controllers
- PLUS+1® displays
- PLUS+1® joysticks and pedals
- PLUS+1® operator interfaces
- PLUS+1® sensors
- PLUS+1® software
- PLUS+1® software services, support and training
- Position controls and sensors
- PVG proportional valves
- Steering components and systems
- Telematics

**Danfoss Power Solutions** is a global manufacturer and supplier of high-quality hydraulic and electric components. We specialize in providing state-of-the-art technology and solutions that excel in the harsh operating conditions of the mobile off-highway market as well as the marine sector. Building on our extensive applications expertise, we work closely with you to ensure exceptional performance for a broad range of applications. We help you and other customers around the world speed up system development, reduce costs and bring vehicles and vessels to market faster.

Danfoss Power Solutions – your strongest partner in mobile hydraulics and mobile electrification.

**Go to [www.danfoss.com](http://www.danfoss.com) for further product information.**

We offer you expert worldwide support for ensuring the best possible solutions for outstanding performance. And with an extensive network of Global Service Partners, we also provide you with comprehensive global service for all of our components.

Local address:

**Hydro-Gear**

[www.hydro-gear.com](http://www.hydro-gear.com)

**Daikin-Sauer-Danfoss**

[www.daikin-sauer-danfoss.com](http://www.daikin-sauer-danfoss.com)

**Danfoss  
Power Solutions (US) Company**  
2800 East 13th Street  
Ames, IA 50010, USA  
Phone: +1 515 239 6000

**Danfoss  
Power Solutions GmbH & Co. OHG**  
Krokamp 35  
D-24539 Neumünster, Germany  
Phone: +49 4321 871 0

**Danfoss  
Power Solutions ApS**  
Nordborgvej 81  
DK-6430 Nordborg, Denmark  
Phone: +45 7488 2222

**Danfoss  
Power Solutions Trading  
(Shanghai) Co., Ltd.**  
Building #22, No. 1000 Jin Hai Rd  
Jin Qiao, Pudong New District  
Shanghai, China 201206  
Phone: +86 21 2080 6201

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.